
Energy Tedm OAction Tedm

Product Installation Instructions

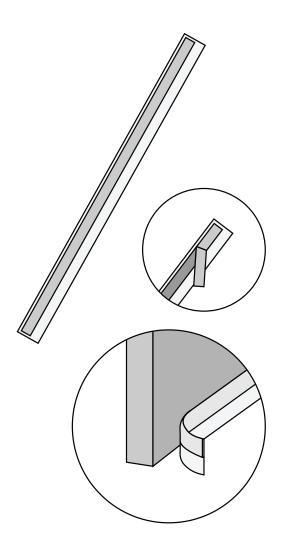

Door Sweep

To complete installation, you will need:

- Self-stick vinyl door sweep (included in your kit)
- Measuring tape
- Scissors

Instructions

- 1. Make sure the door surface is clean, dry and grease-free.
- 2. Measure door width.
- 3. Shorten sweep if needed.
- 4. Place the product so the sweep flexes against the threshold.
- 5. Remove the backing and press into place.









Energy Efficiency