



Product Installation Instructions



High-Efficiency Showerhead

To complete installation, you will need:

- High-efficiency showerhead (included in your kit)
- Teflon tape (located in your kit)
- Vice grip pliers
- Crescent wrench
- Old towel or rag
- Old toothbrush

Instructions

REMOVE OLD SHOWERHEAD

1. Place an old towel or rag over the drain at the bottom of the shower/tub. This will prevent any washers or grit from the shower arm falling down the drain.
2. Cover shower arm (the pipe coming out of the wall) with an old towel or rag, then affix vice grip pliers securely to the shower arm approximately one inch above the showerhead attachment nut.
3. Now fit a crescent wrench to the showerhead attachment nut. Maintain a firm grip on the vice grip pliers so that it stays stationary, and turn the crescent wrench slowly counterclockwise, thus removing the existing showerhead.

CLEAN EXISTING SHOWER ARM

4. Using an old toothbrush and a dry rag, clean and dry the threaded area of the shower arm thoroughly.

FLUSH OUT SHOWER PIPE



5. After removing the old showerhead, turn on the water and allow to run for 5 to 10 seconds. This will flush out any residue that might have come loose inside the pipe.

PREPARE SHOWER ARM

6. Dry threads on the shower arm again if necessary and wrap the Teflon tape 1-1/2 to 3 turns clockwise around the threaded tip of the shower arm.

INSTALL NEW SHOWERHEAD

7. In a clockwise direction, screw your new high-efficiency showerhead onto the taper portion of the shower arm. Place the old towel inside the crescent wrench grip area and tighten slightly until snug.

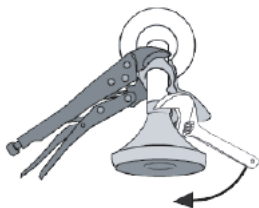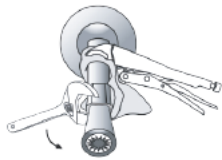

Energy Efficiency



Energy
Efficiency
Program

