


Energy **Action** Team

Product Installation Instructions

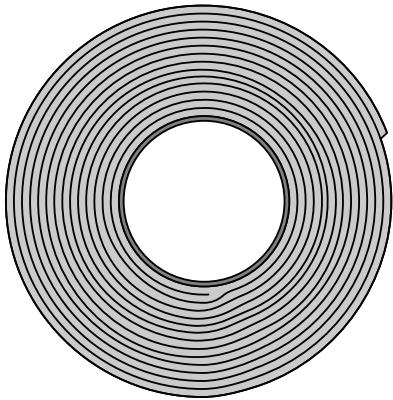

Weatherstripping Roll

To complete installation, you will need:

- Self-stick weatherstripping for windows and doors (included in your kit)
- Measuring tape
- Scissors

Instructions

1. Remove any old weatherstripping from the doorway. Clean any debris and the door area with an old rag.
2. Measure width and height of doors and windows to be sealed.
3. Cut weatherstripping to those dimensions.
4. Peel away the adhesive backing and press into place.
5. Apply to top and bottom of window and along the sides of the frame for extra weatherproofing.
6. Apply to doorstop moldings across the top and down the latch and hinge sides.
7. Apply to the door frame next to the mold

